PYLE®

PyleAudio.com

# PLDVRCAM14

Key Definition Description

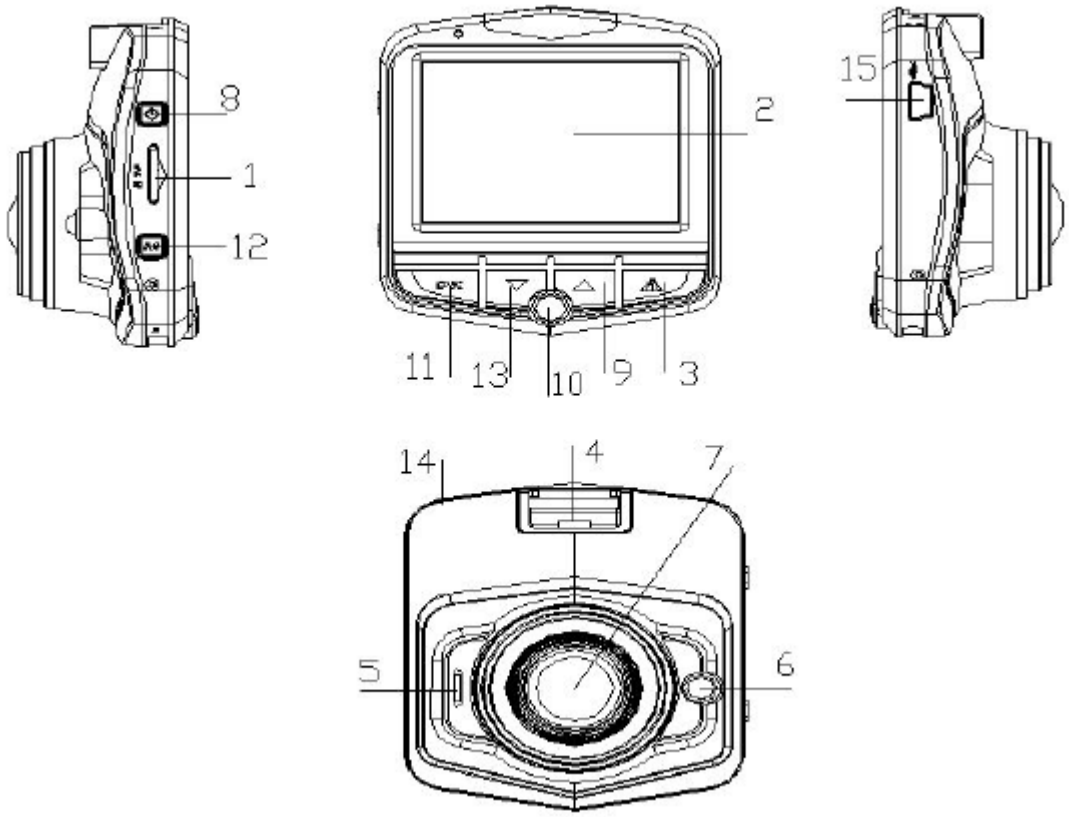


1. SD card slot
2. The display
3. Emergency Lock key
4. Stand position
5. Speaker position
6. IR Light
7. The lens
8. Power button
9. Key(button)
10. Menu button
11. Ok button(confirm button)
12. Mode button/long driveway offset by 5 seconds
13. the next key
14. Unit housings
15. USB interface

Unit Includes: USB power supply

Features

Before using this product please insert TF card( we suggest to use the CLASS 10 high speed TF card), all the files will be saved in the TF card.

on/off function

Power : press " power button" to start

Off: when turned on, press 3 second " power button" to turn off the unit.

Others: Insert the car charger will automatically boot, unplug the car charger delay 10s automatic shutdown.

Recording function: Press the Mode key to switch to video mode

Video: recording standby, short press " OK" button for video recording, short press the " OK" button to stop and save the video files.

Camera functions: Press the mode button to switch to camera mode

photo: photo stand, short press" OK" button to take photo.

Playback functions: Press the " Mode" button to switch to playback mode

Playback: Playback mode, press the " KEY" or " under key" to select the file and press" Ok" button to play the file.

Plus/unlock functions:

Lock: when recording press the " lock key", the current recording videowill lock pretection:

Unlock: In playback mode to unlock through menu options

The charging mode

when the car charger connect with the unit, it will sharting charging mode automatically, you need to press the " power button" 3 second to enter into the video mode

Video Menu

Video mode, press the " menu" key to enter the recording menu interface:

1. The Video format( video picture quality when shooting): set video resolution 1920X1080 ,1440X1080, 1280X720,640X480.
2. Head of the mark: on/off
3. Motion detection: close/open
   Close: when recording standby, DVR will not take any action.
   Open: when recording standby, when the object moves in front of the camera to automatically turn on the video.
4. Recording files time setting: 1/3/5 minutes long for each file.
5. Sound Recording: on/off . when if set off, would not record the sound, when set “ on”, will record the sound.
6. Exposure value
7. Lane departure(Track deviation)warning/Collision warning: can open this function,and also can set this function’s sensitivity.

Camera Take photos menu.

Camera mode : press the menu into the camera menu interface.

1. Take photos mode: Off/2 second Delay shooting/10 second delay shooting/ Continuous

shooting

2. Image size: 3M/5M/8M/12M
3. Exposure: -2.0 to 2.0

Playback menu

1. Delete: Delete single file or delete all files.
2. Lock/Unlock: lock single file or lock all files
3. Thumbnail: Achieve JiuGongTu Preview
4. Volume: Set the volume the video when play back.

System Menu

Enter the Menu, press the " menu" key again to enter the system setting menu.

1. Format: Format the TF card
2. Language: change the language you need. English/Chinese simplified/Chinese Traditional/Korean/Japanese/Russian/Frech/German/Spanish/Italian/Portuguese/Arabic.
3. Automatic shutdown: The unit would shutdown within the a set period of time without any operation. Can set 1 minutes/3 minutes/5 minutes/Off
4. Automatic Screensaver: can set 1 minutes/2 minutes/3 minutes/Off
5. Reset system: restore factory settings
6. Power frequency: 50Hz/60Hz
7. Time setting: the setting of time and date
8. USB function: set the plug USB data line connected to the computer's state that is removable disk /PC mode
9. IR: open / close / automatic
10. Version information: view the current system version

Download File

1. Connect to PC USB, select "mobile hard disk" in the mode options"
2. There would be "removable disk" symbol in the "My computer".
3. Download files in the DCIM/100MEDIA folder